

 


Embracing Finest Moments

## **INSTRUCTION MANUAL**

**Total No Frost Upright Freezer**

**EFUF 1601GY SW**

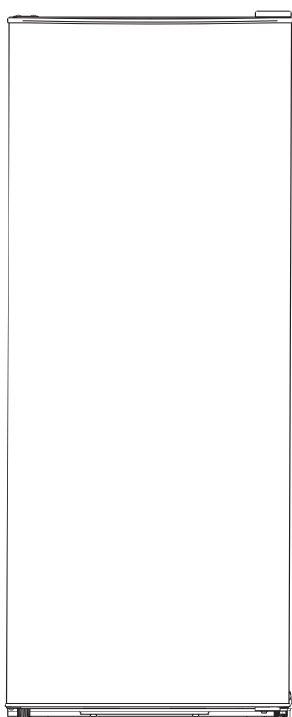

**PLEASE READ THIS MANUAL CAREFULLY BEFORE USING THIS PRODUCT**  
**PLEASE FOLLOW ALL SAFETY RULES AND OPERATING INSTRUCTIONS**



# CONTENT

Important Safety Instructions .....	1-2
Installation.....	3
Product Overview .....	4
Operation.....	5
General Maintenance .....	6
Troubleshooting.....	7
Technical Specification .....	8
Warranty & Service .....	9

Dear Customer,

Thank you for having purchased and given your preference to our product. This manual provides a means to make full use of the features of this appliance. We recommend that you read this manual for best performance and to extend the life of your appliance.

Please preserve this manual for future use, in the event that doubts arise relating to the operation.

## **IMPORTANT SAFETY INSTRUCTIONS**

### **DISPOSAL OF OLD APPLIANCES**

Before disposing of an old appliance remove any plugs and power supply to ensure that the appliance is safe to be removed.

Remove the doors to prevent risk of child entrapment and leave the shelves in place.

This appliance must not be discarded as general household waste.

Instead it should be handed over to the applicable collection point for recycling of electrical and electronic component Disposal must be carried out in accordance with local environmental regulations for waste disposal.

By disposing this product correctly help preventing potential negative consequences for the environment and human health, which would otherwise be caused by inappropriate waste handling of this product.

**Warning:** When disposing of an old appliance, make sure that the evaporator and the coil is not damaged and there is no gas leak.

### **BEFORE INSTALLING AND USING YOUR NEW APPLIANCE**

Before initial start, keep the Upright Freezer in an upright position for 4 hours before connecting it to power supply.

Read through the instructions supplied with the appliance – failure to install or use this appliance in accordance with the instruction book may invalidate any warranty.

Do not install this appliance if it has been damaged during transportation. This includes the plug and supply cord.

Please keep these instructions in a safe place for future reference.

The company declines all responsibilities in case of incorrect installation or failure to adopt proper safety measures or stated in this manual.

**Note:** This appliance is intended to be used in household and similar applications such as staff kitchen areas in shops, offices and other working environments; farm houses and by clients in hotels, motels and other residential type environments; catering and similar on retail applications.

## IMPORTANT SAFETY INSTRUCTIONS

- To prevent damage to the door and door gasket, make sure the door is fully opened before pulling out any shelves.
- Do not move the Upright Freezer when it is loaded with food, this might damage the appliance.
- If the power cord and plug is damaged it should only be replaced by the manufacturer or a suitably qualified person.
- Never allow children to operate, play with, or crawl inside the appliance.
- Never clean appliance parts with flammable fluids.
- Do not store or use gasoline or any other flammable vapors and liquids in the vicinity of this or any other appliance. This can create a fire hazard or explosion.
- Always remember to unplug the appliance before cleaning. When disconnecting from the electricity supply, pull the plug, not the power cord.
- Do not use anything electrical inside the Upright Freezer.
- All electrical repairs must be carried out by qualified technical personnel. Improper repair may result in a major source of danger for the user and invalidate any warranty.
- Never store anything dangerous inside the appliance, such as combustibles, explosives, strong acid or alkali etc.
- Always keep any ventilation openings and clear of obstruction. Make sure that the plug is accessible.
- Only use this appliance for domestic purposes in accordance with these instructions.
- The Upright Freezer is suitable for storing fresh or frozen foods.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Ensure the supply cord is not trapped or damaged when positioning the Upright Freezer.
- Do not locate multiple portable socket-outlets or portable power supplies at the rear of the Upright Freezer.
- Do not use extension cord or ungrounded (two prong) adapters.

**⚠Warning: Do not allow the refrigerant circuit to become damaged while using or installing the appliance. Should it become damaged, do not use the appliance until you are instructed to do so by a service engineer. Refrigerant can ignite or cause damage to the eye when leaking.**

**⚠Warning: Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.**

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Children aged from 3 to 8 years are not allowed to load and unload Upright Freezer.

To avoid contamination of food, please take note on the following instructions:

- Opening the door for long periods can cause significant increase of the temperature in the compartment of the appliance.
- Clean regularly surfaces that can come in contact with food and accessible drainage systems.
- Clean water tanks if they have not been used for 48 h; flush the water system connected to a water supply if water has not been drawn for 5 days.
- Store raw meat and fish in suitable containers in the Upright Freezer, so that it is not in contact with other food.

– If the appliance is left empty for long periods, switch off, defrost, clean, dry, and leave the door open to prevent mould developing within the appliance.

**The refrigerant of the appliance is R600a, flammable and explosive articles should not be put in or near the cabinet, to avoid the fire or explode caused.**

 


**Warning: Risk of fire / Flammable materials**

## **INSTALLATION OF YOUR UPRIGHT FREEZER**

- Before use, remove the exterior and interior packing.
- **Note:** Before connecting the Upright Freezer to the power source, let it stand upright for approximately half an hour. This will reduce the possibility of a malfunction in the cooling system from handling during transportation.
- Before use, clean the interior surface with lukewarm water using a soft cloth.
- Place your Upright Freezer in a well-ventilated indoor place; the ground should be flat and sturdy to support it when it is fully loaded. To level your Upright Freezer, adjust the front levelling foot at the bottom of the Upright Freezer (rotate left or right to adjust).
- Locate the Upright Freezer away from direct sunlight and sources of heat (stove, heater, radiator, etc.). Direct sunlight may affect the acrylic coating and heat sources may increase electrical consumption. Extreme cold ambient temperatures may also cause the unit not to perform properly.
- Avoid locating the Upright Freezer in moist areas to prevent dust or reduction of insulating effect.
- Condensation may occur if the ambient humidity is too high.
- The Upright Freezer should be positioned at a place where the ambient temperature is between 5°C and 35°C. If the ambient temperature is above or below this range, the performance of the unit may be affected. Placing the appliance in extreme cold or hot conditions may cause the interior temperatures to fluctuate and the range of setting temperatures may not be reached.
- Plug the Upright Freezer into an appropriate socket.
- If positioned next to another fridge or freezer, leave a minimum gap of 2cm between the appliances in order to avoid condensation.
- An allowance of 50mm should be left above the Upright Freezer. If this cannot be achieved, ensure that a 25mm allowance on each side of the Upright Freezer.
- Fit the plastic wall spacers to the condenser on the rear of the appliance, this will ensure an air gap between the appliance and the wall.
- Do not place heavy objects on the top of the Upright freezer considering that objects may fall when opening or closing the door and accidental injuries may happen.

## PRODUCT OVERVIEW

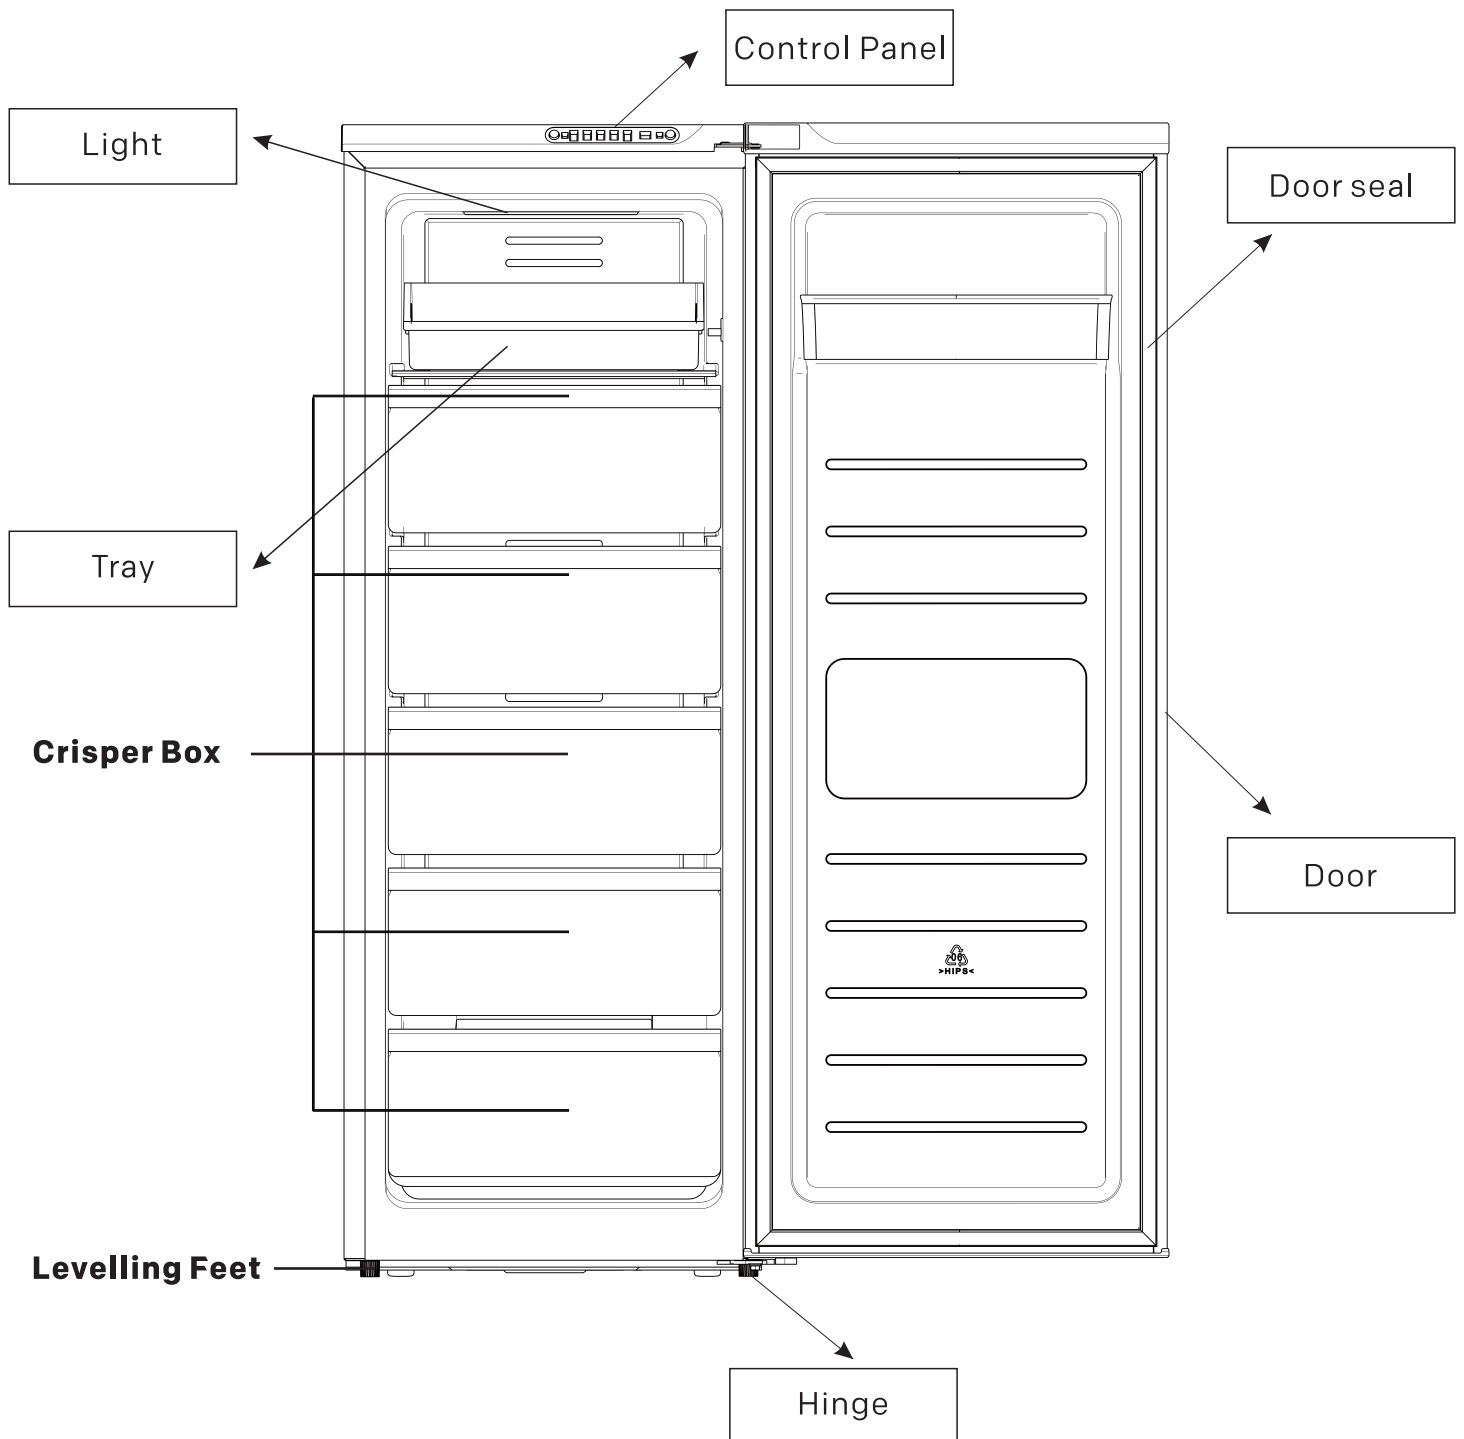

Note:

Product appearance and specifications may varies depending on models and configuration.


The door is non-reversable.

Picture is for illustration only. The actual appliance purchased might not be exactly the same as the photo shown above.

## OPERATION

 Before initial start, keep the Upright Freezer in an upright position for 4 hours before connecting it to power supply.


### Control Panel

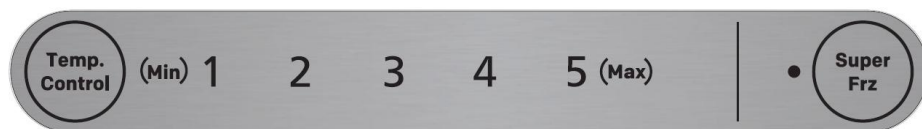

#### Temperature control

Press the “Temperature Control” button, the control panel display the original setting temperature level (the freezer is powered on for the first time, the default temperature level is 3). Each time you press the “temperature control” button, it will adjust the temperature.

 If the “super freeze” mode is not selected or there is no adjustment to the temperature level, the last selected temperature will take effect.

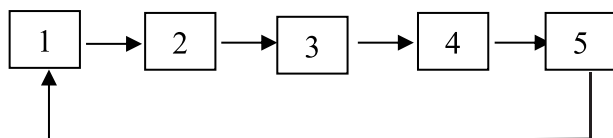

#### Super freeze

During super freeze mode, the Upright Freezer will run for 6 hours. It will automatically exit after 6 hours or when the user has pressed the “temperature control” button.

#### Setting the display on and off

When the door is open, the display will indicate the temperature last selected. If there is no button operation after 1 minute, the temperature level LED will turn off and the alarm will sound. After the door is close, pressing the “Temperature Control” button or the “Super Freeze” button will turn on the last selected temperature level LED for 1 minute. The temperature level LED goes out if there is no button operation.

#### Upright Freezer lighting settings

When the door is open, the light will turn on. After closing the door, the light will turn off.

If the door is open for more than 10 minutes, the light will automatically turn off. After the door is closed and the door is open again, the light will turn on again.

#### Upright Freezer alarm setting

If the door is open for more than 1 minute, the buzzer will sound an alarm. The alarm will stop after the door is closed.



## GENERAL MAINTENANCE

### ➤ Cleaning Your Upright Freezer

- Turn off the power, unplug the appliance, and remove all items including shelves and rack.
- Clean the interior with warm water and baking soda solution. The solution should be about 2 tablespoons of baking soda to a quart of water.
- Wash the shelves with a mild detergent solution.
- Wring excess water out of the sponge or cloth when cleaning the control panel or any electrical parts.
- Clean the exterior cabinet with warm water and mild liquid detergent. Rinse well and wipe dry with a clean soft cloth.
- The below items will damage the surface of Upright Freezer:



### ➤ Power Failure

- Most power failures are resumed within a few hours and should not affect the temperature of your appliance if you minimize the number of times the door is opened. If the power is going to be off for a longer period of time, you need to take the proper steps to protect your contents.

### ➤ Vacation Time

- **Short vacations:** Leave the Upright Freezer in operation for vacation less than three weeks.
- **Long vacations:** If the appliance will not be used for several months, remove all items and turn off the appliance. Clean and dry the interior thoroughly. To prevent odor and mold growth, leave the door open slightly.

### ➤ Energy Saving Tips

- The Upright Freezer should be located in the coolest area of the room, away from heat producing appliances, and out of the direct sunlight.
- Let hot foods cool to room temperature before placing in the appliance. Overloading the appliance forces the compressor to run longer. Foods that freeze too slowly may lose quality, or spoil.
- Be sure to wrap foods properly, and wipe containers dry before placing them in the appliance. This cuts down on frost build-up inside the appliance.
- Appliance storage bin should not be lined with aluminium foil, wax paper, or paper towelling. Liners interfere with cold air circulation, making the appliance less efficient.
- Organise and label food to reduce door openings and extended searches. Remove as many items as needed at one time, and close the door as soon as possible.

## TROUBLE SHOOTING

Try the suggestions below before calling the customer service center

PROBLEM	POSSIBLE CAUSE
Upright Freezer does not operate.	Not plugged in. The appliance is turned off. The circuit breaker tripped or a blown fuse.
Odor	Odorous foods shall be tightly wrapped Check whether there is any rotten food Clean the inside of the appliance
Compressor turns on and off frequently.	The room temperature is hotter than normal. A large amount of contents has been added to the upright freezer. Let the food cool to room temperature before putting in the appliance. The door is opened too often. The door is not closed completely. The temperature control is not set correctly. The door gasket does not seal properly.
The light does not work.	Not plugged in. The circuit breaker tripped or a blown fuse. The bulb has burned out. The light button is "OFF".
Vibrations	Check to assure that the Upright Freezer is levelled to the floor.
The Upright Freezer is noisy	The rattling noise may come from the flow of the refrigerant, which is normal. As each cycle ends, you may hear gurgling sounds caused by the flow of refrigerant in your Upright Freezer. The upright freezer is not leveled.
The door cannot close properly.	The appliance is not leveled. Too much food is placed The door gets stuck by the food packages.
Condensation on the surface	Condensation on the exterior surface and door seals of the upright freezer is normal when the ambient humidity is too high. Just wipe it with a clean towel.
Door seal fails to be tight	Remove foreign matters on the door seal. Heat the door seal and then cool it for restoration. (or blow it with an electrical drier or use a hot towel for heating)

If the problem persists after the above rectifications or if the appliance is not functioned properly, please contact our customer care center for assistance.

## TECHNICAL SPECIFICATION

<b>Product model</b>	<b>EFUF 1601GY SW</b>
Voltage/frequency	220~240V 50/60Hz
Refrigerant/weight	R600a 43g
Volume	142L
Net weight	38kg
Unit dimension(WxDxH)	475×635×1290mm
Packing dimension(WxDxH)	508×648×1330mm

### Remarks :

1. Net weight includes the weight of drawers
2. The manufacturer reserves all the rights to change the above parameters without prior notice. Please refer to the nameplate of your appliance.

## WARRANTY AND SERVICE

Please get ready the model number of your appliance, date of purchase and the product issues when contacting our customer care center. For appliances under warranty, proof of purchase is required.

- To activate your warranty, please register your appliance.
- Warranty registration can be done via our website or scan the QR code below

### Website

<https://shop.casa.sg/E-Warranty>

### QR Code

Scan the QR Code below. It will redirect straight to our “Warranty Registration” page.



***Casa (S) Pte Ltd. reserves the rights to the final interpretation of the content of this manual. Customer will not be notified in the event of any amendments to the content.***

***The manufacturer and agent decline all responsibilities in the event of damage caused by improper, incorrect or illogical use of the appliance.***

**For customer care / after sales service [Singapore], please contact**

**Casa (S) Pte Ltd**  
15, Kian Teck Crescent, Singapore 628884  
**Telephone:** +65 6268 0077  
**Fax:** +65 6898 0510  
**Email:** [service@casa.com.sg](mailto:service@casa.com.sg)