

TELESCOPIC HOOD

MODEL
TF 5294/60 BK
TF 5294/90 SS
TF 5294/90 BK



EMBRACING FINEST MOMENT

User Manual

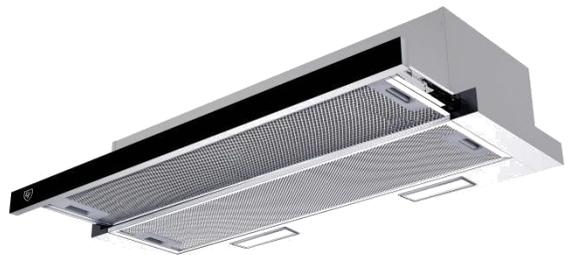


TABLE OF CONTENTS

Safety Guidelines.....	1
Product Specification	5
Installation.....	6
Operation.....	9
Cleaning and Maintenance.....	10
Trouble Shooting.....	12
Warranty and Service.....	13

Dear Customer,

Thank you for having purchased and given your preference to our product. This manual provides a means to make full use of the features of this product. We recommend that you read this manual for best performance and to extend the life of your appliance.

Please preserve this manual for future use, in the event that doubts arise relating to the operation.

SAFETY GUIDELINES

Packaging

- This appliance and the packaging are produced by processes that minimize waste and friendly to the environment.
- Please dispose the packaging in an environmentally friendly manner
- Please do not allow young children to play with the plastic film and packaging as this may result in suffocation.
- Before disposing of any old appliances, be sure to cut off the power cord so that others will not be end angered by a defective electric appliance


Installation and Usage

- Read this user manual thoroughly before attempting to use this appliance.
- This appliance is intended for domestic use only. The appliance is not intended for use outside.



- The appliance can only be used safely if it is correctly installed according to the safety instructions.
- Do not connect the appliance if there are obvious signs of transportation damage.

- Ensure that the appliance is installed in a location with good ventilation.
- Installation and repair should be attempted only by qualified technical personnel.
- Do not modify any part of this appliance.
- This appliance may be used by children over the age of 8 years old and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children must not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Caution: The appliance and its accessible parts can become hot during operation. Never touch the hot parts. Allow appliance to cool down before cleaning.
- Check that the main voltage in your area corresponds to the voltage of the appliance shown on the rating label before plugging in.
- The electrical connection of this appliance must be connected to earth.
 - Green & Yellow = EARTH**
 - Blue = NEUTRAL**
 - Brown = LIVE**
- Multiple plugs and extension cables must not be used. Overload is dangerous and may cause a fire.
- Ensure that the power supply cord is free from any heat source or sharp objects.
- The recommended minimum installation height from the bench top to the lower part of the hood is 750mm and 650mm respectively for gas hob and electric hob.

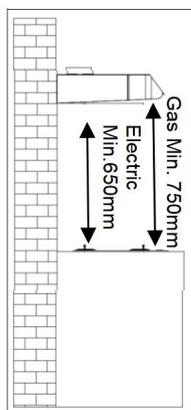

- If the instructions for the installation of gas hob is greater than the recommended height, this has to be taken into account.
- Ensure that the filters are cleaned or replaced at an appropriate intervals to prevent grease deposit to build up and increases the risk of fire.
- The appliance should be switched off and the electrical supply has to be disconnected before any cleaning or maintenance work can be

carried out.

- Do not flambé or grill with an open flame directly under this appliance. Flame could be drawn up to the hood by the strong suction and may risk the grease filter to catch fire.

IMPORTANT:

The company declines all responsibilities for any damages resulting from improper installation or poor layout design and/or failure to adopt proper safety measures stated in this manual.

Warning!!!

- Never operate the appliance without the grease filters or if the filters are excessively greasy
- Do not install above a cooker with a high level grill.
- Do not leave frying pans unattended during cooking as overheated fats or oil might catch fire.
- Never leave naked flames under the appliance.




- If the cooker hood is damaged, do not attempt to use.
- Do not flambé under the cooker hood.
- The air must not be discharged into a flue that is used for exhausting fumes from appliances burning gas or other fuels. Range hoods and other cooking fume extractors may adversely affect the safe operation of appliances burning gas or other fuels (including those in other rooms) due to back flow of combustion gases. The gas can potentially result in carbon monoxide poisoning. After installation of a range hood or other cooking fume extractor, the operation of open flued gas appliances should be tested by a competent person to ensure that back flow of combustion gases does not occur.




PRODUCT SPECIFICATION

SPECIFICATIONS:

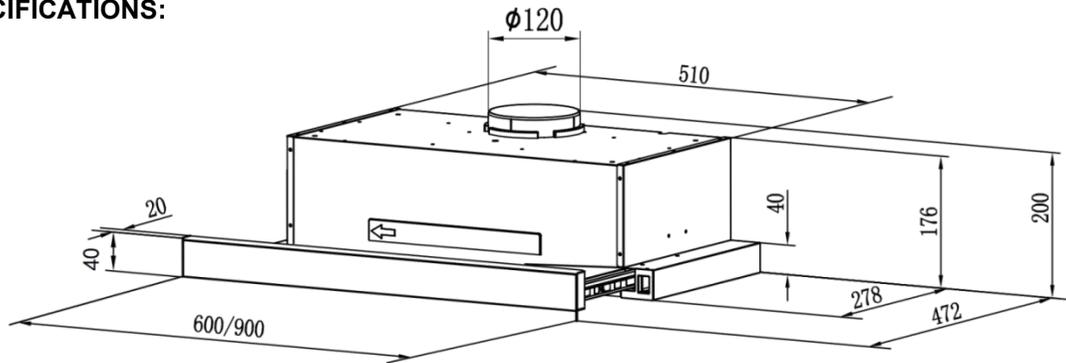

Product	Telescopic Hood
Voltage	220-240V/50Hz
Motor Power	2 x 100W
Lamp Power	1 x 1W (TF 5294/60 BK) 2 x 1W (TF 5294/90 BK; TF 5294/90 SS)
Product Dimension	600/900 x 200 x 278-472 (L x H x D)

COMPONENT LIST:

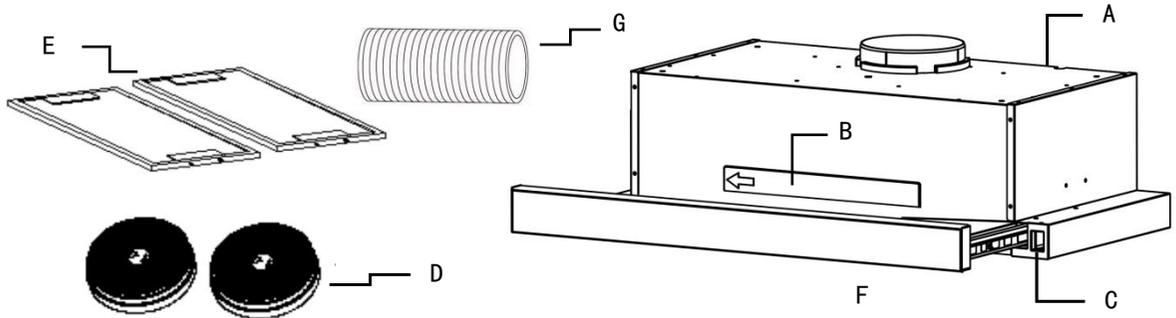


Ref	Parts Description	Qty
A	Hood body	1
B	Recirculation Air Outlet cover	1
C	Control switch	1
D	Charcoal filter	2
E	Aluminum grease filter	2
F	LED light	1 (60cm) / 2 (90cm)
G	1.5m alu. foil exhausted duct pipe	1
	Cable 1.65m(Total Length)	
Others		
	Wall Plug	4
	Wall screw ST4*30	4
	Wall screw ST4*20	4
	Wall screw ST4*8	2
	User Manual	1

INSTALLATION

This appliance is configured to operate in either the ducted mode or recirculation mode


- Please ensure that installation surface is solid and able to withstand the weight of the appliance.
- The minimum installation height from the cooking appliance to the lower part of the hood is 750mm and 650mm respectively for gas hob and electric hob.

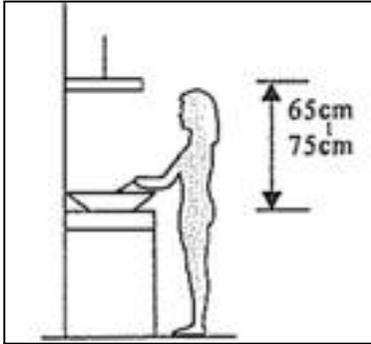

- Do ensure that there are no electrical wires, gas pipes or water pipes in the area where holes are to be drilled.


Ducted Mode

- In ducted mode, the extractor hood fan extracts the cooking vapor and passes them through the grease filter before it is expelled to outside atmosphere.
- The grease filter absorbs the solid particles in the cooking vapors.
- In this mode, only aluminum filters are installed (charcoal filter is optional).

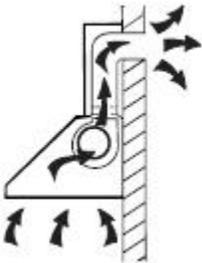

The hood can be connected as below picture by means of an exhaust duct (enamel, aluminum, flexible pipe or non-flammable material with an interior diameter of 150mm)

- Attach $\varnothing 150\text{mm}$ pipe directly to the air outlet and secure appropriately
- Connect pipe to the outdoor duct

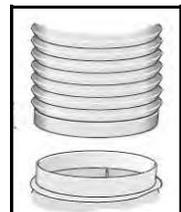


Recirculation Mode


- Fumes are filtered for grease and odor through the filters and recirculate back to the kitchen environment.
- Charcoal filters are required for recirculation mode (Charcoal filters are pre-assembled to the appliance, please remove the adhesive tape on the filters first before operation)

OPERATION SETTING

- Before installation, please confirm the operation mode first.
- The appliance is pre-set to operate in ducted mode (Pic A).

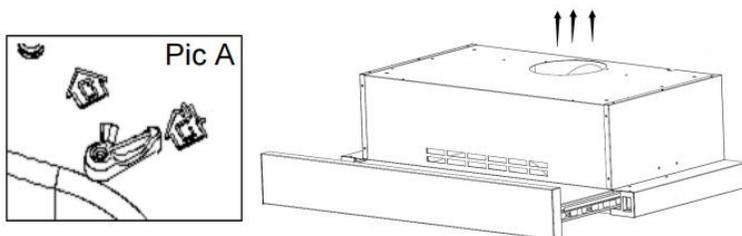

- To change the setting to recirculation mode, turn the adjuster located at the center of motor casing to position as shown in Pic B

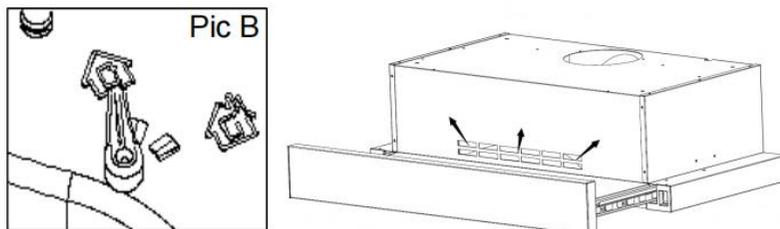

- For recirculation mode, please remove the front outlet cover and ensure that the top vent outlet is covered.

WALL MOUNT INSTALLATION


Do ensure that the appliance is mounted on a solid surface which could withstand the appliance's weight.

- Drill 2 x Ø8mm on a suitable place according to the distance of the appliance (450mm for 60cm and 750mm for 90cm).
- Insert the wall plug into the holes.
- Insert the screws (x 2) into the wall plugs and leave about 10mm gap untightened.
- Put the appliance up and tighten the screws.

- Fix the cooker hood with safety screw. The two safety vents are positioned on the back casing, with diameter of 6mm.
- Put the one way valve onto the cooker hood.




(Safety vents)

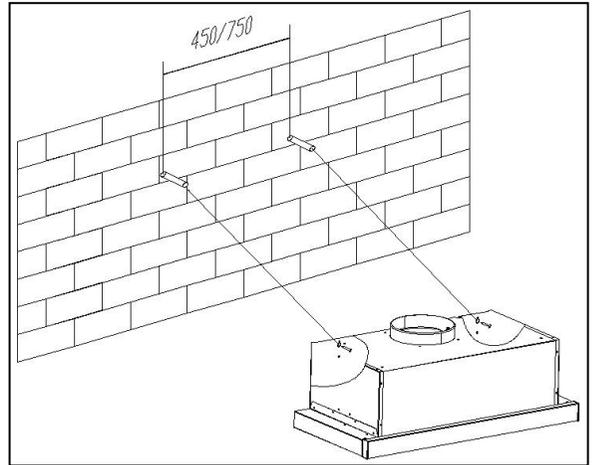

CABINET MOUNT INSTALLATION

- Drill 4 X Ø6mm holes at the bottom of the cabinet according to the position of the screw holes on top of the appliance .
- Lift the appliance to the bottom of the cabinet as shown below
- Put the one way valve on the cooker hood, then tighten the appliance with the 4 screws provided to the 4 holes at the bottom of the cabinet.

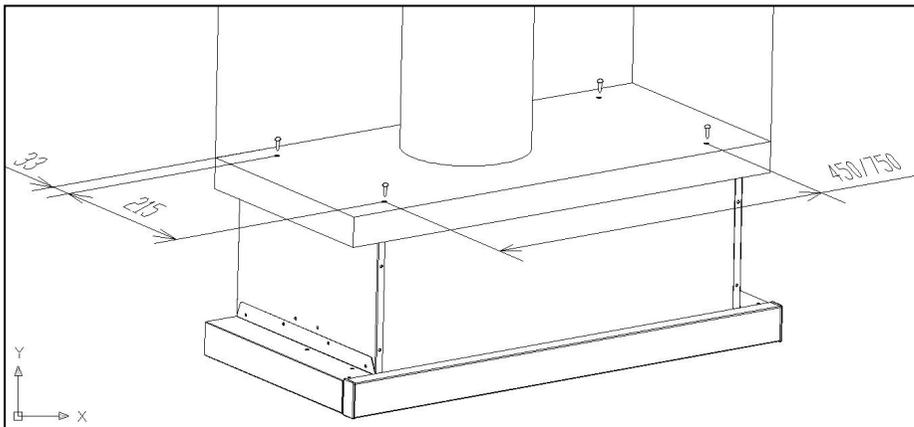


Note:

- The exhaust pipe is supplied.
- Take off protection film before installation.


CHARCOAL FILTER INSTALLATION

- An activated charcoal filter can be used to filter odors.

- To install the charcoal filter, remove the grease filter first. Press to release button and pull it downward as shown below.

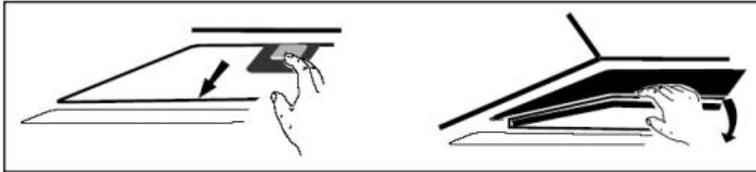

- Fit the charcoal filter onto one side of the motor and turn it clockwise direction to lock into place. Repeat the same on the other side.

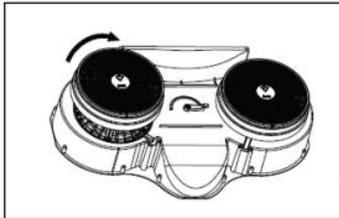

NOTE:

- Make sure the filter is secured and locked properly.
- Extraction power may be reduced if charcoal filter is used.

OPERATION

To achieve a more effective way to remove the fumes, we recommend that to switch on the appliance a few minutes before cooking and leave it on for 5-10 minutes after cooking.



Light button Located at the left side of hood.



Speed button Located at the right side of hood.


=	High Speed
O	Off
-	Low Speed

ELECTRICAL CONNECTION

Before completing any connection, make sure the house voltage corresponds to the voltage indicated on the label affixed inside the appliance.

It is advisable to call a qualified technician to make electrical connection.

Wiring Diagram

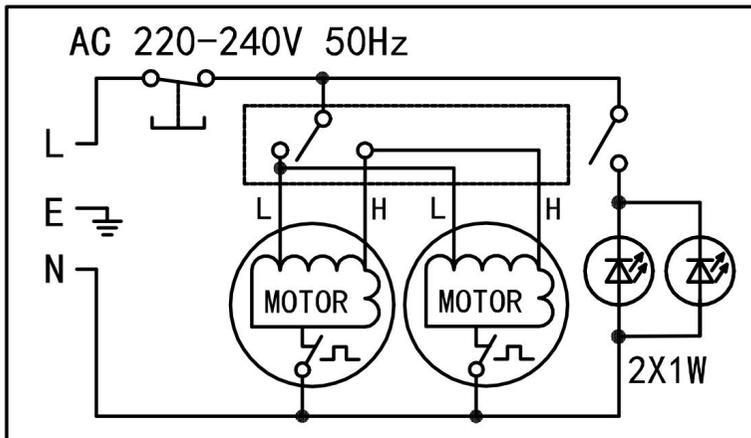

CLEANING AND MAINTENANCE

Regular maintenance and cleaning ensures good performance and reliability, while extending the working-life of the appliance. Disconnect the power supply cord before carrying out any cleaning and maintenance.

ALUMINIUM GREASE FILTERS

Wash in the dishwasher or soak the filters in warm/hot detergent solution for an hour to remove the grease, then rinse off. Leave it dry before putting the filters back to the appliance.

The filter must be cleaned at least once a month or depending on the frequency of appliance usage. Clogged filters restrict airflow and cause the grease deposit to build up which may lead to risk of fire.

Note: Handle with care and do not bend the filters during cleaning. Slight discoloration may occur and this is normal.

CHARCOAL FILTERS

Charcoal filter cannot be reused. They must be replaced once every 6 months or depending on the frequency of appliance usage to ensure good performance. Clogged filters restrict airflow and cause the grease deposit to build up which may lead to risk of fire.

SURFACE OR APPLIANCE BODY


Wash with warm soapy water and a soft sponge. Wipe dry with lint-free cloth. Avoid using abrasive detergent, scouring pads, steel wool or solvents on any part of this appliance as this will cause irreparable damage.

LED LIGHT REPLACEMENT

Before attempting to replace the LED light, make sure that the light switch is turned off. Remove the grease filter to access the LED light.

To remove the LED light

- Push out the light assembly from inside
- Disconnect the connector as shown in the below figure.
- Replace with a new LED light assembly and reverse the procedure to refit it back to the appliance.

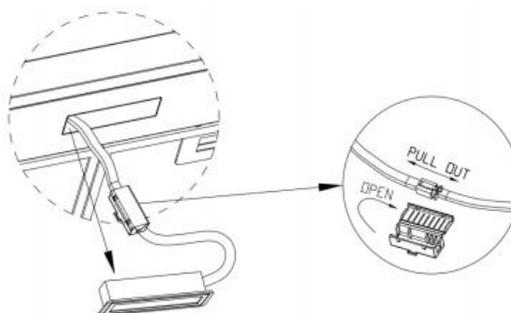

NOTE: Always replace the LED light with the same voltage. LED light with higher voltage than the original type could damage the electrical unit. Contact Customer Care Center for purchasing the parts.

ENVIRONMENTAL PROTECTION



This product is marked with the symbol on the selective sorting of waste electronic equipment. This means that this product must not be disposed of with household waste but must be supported by a system of selective collection in accordance with Directive 2012/19/EU. It will then be recycled or dismantled to minimize impacts on the environment, electrical and electronic products are potentially dangerous for the environment and human health due to the presence of hazardous substances. For more information, please contact your local or regional authorities.

NOTE:

The following shows how to reduce total environmental impact (e.g. energy use) of the cooking process).

- (1) Install the appliance in a proper place where there is efficient ventilation.
- (2) Clean the appliance regularly so as not to block the airway.
- (3) Remember to switch off the appliance light after cooking.
- (4) Remember to switch off the appliance after cooking.

INFORMATION FOR DISMANTLING

Do not dismantle the appliance in a way which is not shown in the user manual. The appliance could not be dismantled by user. At the end of life, the appliance should not be disposed of with household waste. Check with your Local Authority or retainer for recycling advice.

TROUBLE SHOOTING

Symptoms	Possible Cause	Action
Appliance does not function	No electrical supply. Plug and main switch not connected	Check that the plug is connected and the main switched is turned on.
	Damaged switch or short circuit	Check if the switch is damaged or short circuit – replace or repair.
Poor airflow	Distance between the cooking appliance and the hood is too high	Adjust installation height
	Metal grease filters clogged	Clean metal grease filters

	Charcoal filters clogged	Replace charcoal filters
Motor running but No airflow	Air flow blade is jammed	Adjust air flow blade - contact Customer Care Center
Hood suction is not effective	Insufficient ventilation	Ensure that the kitchen is sufficiently ventilated to allow entry of fresh air
	The hood is installed too near or too far to the cooking appliance	Adjust installation height – recommended height is 70cm/60cm from cooking appliance
Strong Vibration	Hood installed incorrectly	Reinstall the hood correctly
	Fan installed incorrectly	Reinstall the fan correctly
	Fan is damaged	Contact Customer Care Center
Strong cooking smell	Charcoal filter not installed	In re-circulating mode, charcoal filters must be installed
Whirring sound	Foreign object in contact With fan blade	Contact Customer Care Center
LED light not working	LED burnt out or loose	Replace LED light or reconnect LED connection



NOTE:

Any electrical repairs to this appliance must conform to your local, state and federal laws. Please contact the service center if in any doubt before undertaking any of the above.

Always disconnect the unit from the power source when opening the unit.

WARRANTY AND SERVICE

Please get ready the model number of your appliance, date of purchase and the product issues when contacting customer service center. For appliance under warranty, proof of purchase is required.

- To activate your warranty, please register your appliance.
- Warranty registration can be done via our website or scan the QR code below

Website

<https://shop.casa.sg/E-Warranty>

QR Code

Scan the QR Code below. It will redirect straight to our “Warranty Registration” page.



- The minimum retention period of performance parts for repairing the cooker hood is 5 years after termination of manufacturing of the cooker hood.

The performance parts refer to those parts for required to maintain the functions of a cooker hood.

However the same kinds of repair parts or interchangeable parts will be supplied for 4 years thereafter.

If the functions can be maintained when repaired, we are willing to repair when ordered by you.

- The parts used on the cooker hood are subject to partial change without prior notice owing to improvement of performance.

Casa (S) Pte Ltd. reserves the rights to the final interpretation of the content of this manual. Customer will not be notified in the event of any amendments to the content.

The manufacturer and agent decline all responsibilities in the event of damage caused by improper, incorrect or illogical use of the appliance.

Contact after sales service center when in doubt of the condition of the appliance.

For customer care / after sales service [Singapore], please contact

Casa (S) Pte Ltd
15, Kian Teck Crescent, Singapore 628884
Whatsapp: +65 9747 8743
General Line: +65 6268 0066
Email: service@casa.com.sg

